 






## Under Cabinet AM/FM CD Player

Model No.: KCD3180

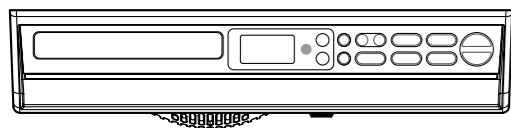

### Instruction Manual

  WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with an arrowhead symbol, within the equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to cause an electric shock.

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in this owner's manual.

### SAFETY PRECAUTIONS

#### ON SAFETY

- Before operating, make sure the voltage requirement of the unit matches your local voltage.
- Disconnect the plug immediately if liquid spills into or onto the unit, or if an object falls into the unit. The unit should not be used until service by a qualified service personnel is completed.
- Do not open the cabinet. Lasers used in rays employed by the unit may damage your eyes. Any servicing should be done by qualified service personnel.
- When you are not going to use the unit for a long period of time, disconnect the power cord.

#### ON PLACEMENT

- Do not leave, mount or use the unit in places which are extremely hot, cold, dusty, or humid.
- Allow adequate air circulation to prevent internal heat build-up. Do not place the unit on a surface or near materials (a curtain ex. rugs, blankets, curtains, etc.) which might block the ventilation holes.

#### ON CONDENSATION

- When left in a heated room where it is warm and damp, water droplets or condensation may form inside the CD player. When there is condensation inside the unit, the unit may not function normally. Let it stand for 1 to 2 hours before turning the power on, or gradually heat the room and allow the unit to dry before use.

#### FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

## IMPORTANT SAFETY INSTRUCTIONS

1. This portable luminaire has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way, if the plug does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.
2. Read these instructions.
3. Keep these instructions.
4. Heed all warnings.
5. Follow all instructions.
6. Do not use this apparatus near water.
7. Clean only with a dry cloth.
8. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
9. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Only use attachments/accessories specified by the manufacturer.
13. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



Portable Cart Warning

### RECOGNIZE SAFETY SYMBOLS, WORDS AND LABELS

#### What You Need to Know About Safety Instructions

Warning and Important Safety Instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution and care must be exercised when operating, mounting, or cleaning this unit.

Always contact your dealer, distributor, service agent or manufacturer about problems or conditions you do not understand.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



**DANGER** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**CAUTION** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



**CAUTION** used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

### MOUNTING INSTRUCTIONS

**TOOLS NEEDED:** 1) Electric drill with 1/4" bit; 2) Phillips-head (cross style) Screwdriver.

#### STEP 1

If your cabinet does **NOT** have an overhang:

- a) Place the Mounting Template in the desired location inside or underneath the cabinet (whichever has less obstructions, and will be easier for you to reach to drill holes), flush with the front edge of the cabinet and tape it down.

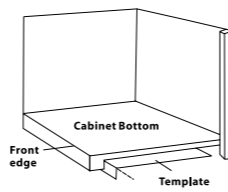 


Figure 2

#### STEP 2

Use an electric drill with a 1/4" bit (not included) to drill all four holes marked on the Mounting Template (see Figure 3). To reduce splintering, place a small piece of masking tape over each hole location before drilling.

Go to **STEP 3**.

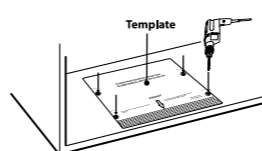 


Figure 3

If your cabinet **DOES** have an overhang:

- a) Measure the thickness of the cabinet overhang (see Figure 1).

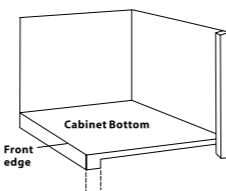 


Figure 1

- b) Fold the Mounting Template along the guideline that is closest to the thickness of your cabinet overhang.

- c) Tape Mounting Template to the underside of the cabinet with the folded portion of the Mounting Template flush up against the cabinet overhang (see Figure 2).

Go to **STEP 2**.

#### STEP 3

If your cabinet does **NOT** have an overhang:

- a) Eight screws are included with this unit, but you will only need four of them. Select the screw length which will go completely through your cabinet bottom, and provide at least 3/8" of thread to screw into the main unit.

(Continued on next page)

(Continued from previous page)

- b) Insert the four selected screws through each hole from the inside of the cabinet going down (see Figure 4).

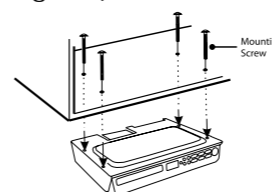 


Figure 4

- c) Hold the unit up against the bottom of the cabinet, and align the four holes on the top of the unit with the screws. Partially tighten each screw, but do not fully tighten the screws until all of them have been started.
- d) Gently tighten each screw until they are firmly holding the unit in place.

Go to **STEP 4**.

If your cabinet **DOES** have an overhang:

- a) Eight screws are included with this unit, but you will only need four of them. Select the screw length which will go completely through your cabinet bottom, and extend at least 3/8" past the bottom of your cabinet overhang.
- b) This unit includes three sets of four spacers of various lengths. The spacers can be put together to form longer spacers to accommodate various cabinet overhang thicknesses. Determine the best combination of spacers which is equal to or longer than the cabinet overhang thickness.
- c) Insert the four selected screws through each hole from the inside of the cabinet going down (see Figure 5).

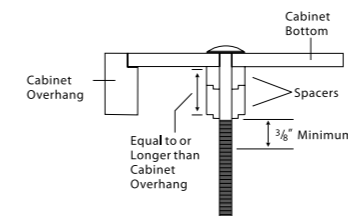 


Figure 5

- f) Gently tighten each screw until they are firmly holding the unit in place. The top front edge of the unit should clear the overhang.

#### STEP 4

Plug the cord into the wall outlet

- a) Before connecting power cord, make sure the voltage of the unit matches with your local voltage.
- b) Plug the power cord directly into the nearest wall outlet, and wrap the remaining cord around the cord storage knob at the rear of the unit.

### MOUNTING SUGGESTIONS

 
- 1) If your cabinet has obstructions inside it which prevent you from using the template, cut out the corresponding area on the template, but do NOT cut out or through the screw holes.
- 2) If your cabinet has obstructions underneath it, which will interfere with the mounting of the unit, remove the obstruction before mounting the unit, or find another location to mount the unit.
- 3) It is recommended that you wear safety glasses while drilling to prevent eye injuries.
- 4) For wood cabinets, you may want to mark the hole locations with a nail, pressed gently but firmly into the wood so that a slight impression is made. This will also help keep the drill bit centered in the right location.
- 5) Hold the drill firmly against the cabinet to keep the drill from "walking".



**TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT OF WALL OUTLET, THEN FULLY INSERT.**

**TO REDUCE THE RISK OF FIRE, DO NOT PLACE ANY HEATING OR COOKING APPARATUS BENEATH THIS UNIT.**

### FRONT PANEL CONTROLS

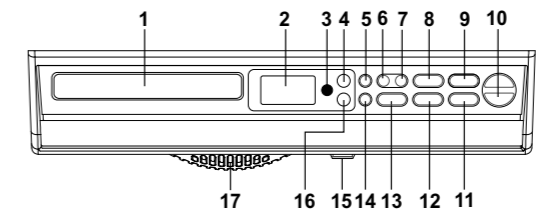

- |                                 |                                  |
|---------------------------------|----------------------------------|
| 1. CD Drawer                    | 9. ►   PLAY/PAUSE button         |
| 2. LCD Display                  | 10. VOLUME+/- button             |
| 3. Remote Control Sensor        | 11. ■ STOP/BAND button           |
| 4. ON/OFF button                | 12. TUNING · SKIP/TIMER - button |
| 5. REPEAT/PRESET button         | 13. CD · RADIO FUNCTION button   |
| 6. CLOCK SET/MEMORY button      | 14. DISP (Display) button        |
| 7. TIMER/ON/OFF · SET button    | 15. LIGHT ON/OFF switch          |
| 8. TUNING · SKIP/TIMER + button | 16. ▲ OPEN/CLOSE button          |
|                                 | 17. Countertop Light             |

### REMOTE CONTROL

- |                             |                              |
|-----------------------------|------------------------------|
| 1. ⏻ POWER button           | 5. 🔍 SEARCH button           |
| 2. TUN- ·  ◀ SEARCH button  | 6. ■ STOP/BAND button        |
| 3. ■ STOP/BAND button       | 7. MEMORY/CLOCK SET button   |
| 4. MEMORY/CLOCK SET button  | 8. FUNCTION button           |
| 5. FUNCTION button          | 9. REPEAT/PRESET+ button     |
| 6. REPEAT/PRESET+ button    | 10. TUN+ · ▶▶  SEARCH button |
| 7. TUN+ · ▶▶  SEARCH button | 11. ►   PLAY/PAUSE button    |
| 8. ►   PLAY/PAUSE button    | 12. DISPLAY button           |
| 9. DISPLAY button           | 13. VOLUME+/- buttons        |
| 10. VOLUME+/- buttons       |                              |

#### USING THE REMOTE CONTROL CORRECTLY

- Point the remote control at the REMOTE SENSOR located on the unit.
- When there is a strong ambient light source, the performance of the remote's infrared may be degraded, causing unreliable operation.
- The recommended effective distance for remote operation is about 13 feet (4 m).

Notes:

- When tuning the radio or searching for a track, the TUN- · |◀ SEARCH and TUN+ · ▶▶| SEARCH buttons on the remote control are the same as the TUNING · SKIP/TIMER+/- buttons on the main unit.
- The REPEAT/PRESET+ button on the remote control is the same as the REPEAT/PRESET button on the main unit.

#### ATTENTION

- Remove the protective plastic tab before operating the remote control.



#### To change battery

1. Open the battery door.
2. Insert one CR2025 (3V) size battery.



#### MAGNETIC REMOTE CONTROL

A magnet is built into the remote control so that it can be attached to your refrigerator.

#### BATTERY REPLACEMENT

When the battery becomes weak, the operating distance of the remote control is greatly reduced and you will need to replace it.

**Note:** Dispose of used batteries in accordance with local laws and regulations.

**CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

 


**NEVER DISPOSE OF BATTERY IN FIRE OR IT MAY EXPLODE.**

### USING THE COUNTERTOP LIGHT

The countertop light and its ON/OFF switch are located on the bottom of the unit.

1. Turning on the light.
  - Slide the LIGHT switch to ON.
2. Turning off the light.
  - Slide the LIGHT switch to OFF.



#### Replacing the light bulb

1. Unplug the power cord from the wall outlet.
2. Use a screwdriver to unscrew the lamp cover.
3. Open the lamp cover.
4. Unscrew and remove the old light bulb.
5. Install a new light bulb and close the cover.
6. Replace the screw and tighten it.
7. Plug the power cord back into the wall outlet.
8. Slide the light switch to ON.

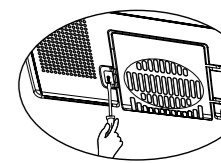 


Figure 1

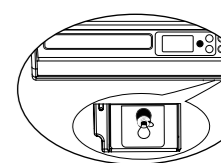 


Figure 2

#### Notes for replacing the bulb:

- Turn off the light, then unplug the power cord.
- Be sure to use S-type 25W bulb for replacement.



**WAIT FOR THE LIGHT BULB TO COOL BEFORE TOUCHING IT TO AVOID BURNS.**

 


**DO NOT PUT YOUR FINGER INTO THE BULB HOLDER TO AVOID ELECTRICAL SHOCK.**



### SETTING THE CLOCK

The unit must be in standby mode. To enter standby mode, make sure that the unit is plugged in, but not turned on.

1. Press the **CLOCK SET/MEMORY** button until the TIME indicator blinks.
3. Press the **TUNING · SKIP/TIMER +** button to set the current minutes.



  
2. Press the **TUNING · SKIP/TIMER -** button to set the current hour.
4. Press the **CLOCK SET/MEMORY** button to start the clock. The clock will automatically start if no button is pressed within 10 seconds.



Note: 12-hour system "12:00 AM" = midnight.

### CD PLAYBACK

 1. Press the **ON/OFF** button on the front panel or the **POWER** button on the remote control to turn on the unit.
2. Press the **CD · RADIO FUNCTION** button to select CD mode.



3. Press the **▲ OPEN/CLOSE** button to open the CD drawer. Place a CD onto the CD tray with the label side up and then press the **▲ OPEN/CLOSE** button to close it. The CD will be scanned by the unit and the total # of tracks will be displayed.

Note: Do not push the CD drawer to close it.



Note: During playback, the track number will disappear and the time will be displayed if no button is pressed within 10 seconds.

- Adjust volume by pressing the **VOLUME +/-** buttons.

#### To PAUSE Playback

- Press the **▶|| PLAY/PAUSE** button. The "0" indicator blinks.
- To resume playback, press the **▶|| PLAY/PAUSE** button again.

#### To STOP Playback

- Press the **■ STOP/BAND** button.

#### To SKIP to a Different Track

- To SKIP to the beginning of the CURRENT track, press the **TUNING • SKIP/TIMER-** button once.
- To SKIP to the beginning of the PREVIOUS track, or any earlier track, press the **TUNING • SKIP/TIMER-** button.
- To SKIP to the beginning of the NEXT track, or any later track, press the **TUNING • SKIP/TIMER+** button.

#### To FAST FORWARD or FAST REVERSE to a Particular Point

 
- To scan forward at high speed, press and hold the **TUNING • SKIP/TIMER+** button and release it at the desired point.
- To scan backward at high speed, press and hold the **TUNING • SKIP/TIMER-** button and release it at the desired point.
- Fast forward or Fast reverse will continue searching the CD until it reaches the end.

### CD REPEAT PLAYBACK

This function will allow a single track or the entire CD to be played repeatedly.


#### Repeat the Current Track

- Press the **REPEAT/PRESET** button until "REPEAT" appears. The current track will be played repeatedly.
- To select a different track to be repeated, press the **TUNING • SKIP/TIMER +/-** buttons.



#### Repeat the Entire CD

 - Press the **REPEAT/PRESET** button until "REPEAT" blinks. All tracks will be played repeatedly.





- Press the **REPEAT/PRESET** button until "REPEAT" disappears.


### CD PROGRAMMABLE PLAYBACK

  20 tracks can be programmed to play in a preset order.

- When the unit is ON and in CD MODE, make sure the CD is STOPPED. Press the **CLOCK SET/MEMORY** button. "MEMORY" and "P 01" will blink on the display. The "P 01" is the program order (1-20).
- Press the **TUNING • SKIP/TIMER +/-** buttons to select the desired track. For example, to play track 2 first, the display would look like this:



 3. Press the **CLOCK SET/MEMORY** button to store the track in memory.



- To add additional tracks, repeat steps 2 - 3 (up to 20 tracks).
- To start playback, press the **▶|| PLAY/PAUSE** button.

#### To check the program:

- After setting, press the **▶|| PLAY/PAUSE** button to start playing, then press the **TUNING • SKIP/TIMER +/-** buttons to check the programmed tracks.

#### To add additional tracks during program playback:

- Press the **■ STOP/BAND** button, then press the **CLOCK SET/MEMORY** button repeatedly until the number of the last programmed track appears and repeat steps 2-4 above.

#### To change the programmed tracks during program playback:

- Press the **■ STOP/BAND** button, and press the **CLOCK SET/MEMORY** button repeatedly to select the number of the program, then press the **TUNING • SKIP/TIMER +/-** buttons to alter the track. Press the **CLOCK SET/MEMORY** button to register the newly programmed track into memory.

#### To erase the whole program, do one of the following:

- Press the **■ STOP/BAND** button twice.
- Press the **CD • RADIO FUNCTION** button to change to radio mode.
- Open the CD drawer by pressing the **▲ OPEN/CLOSE** button.

Note: You can use the REPEAT function during PROGRAM PLAY.

### LISTENING TO THE RADIO

#### TUNING IN TO A STATION MANUALLY

- Press the **ON/OFF** button on the front panel or the **⊖ POWER** button on the remote control to turn on the unit.
- Press the **CD • RADIO FUNCTION** button until TUNER is displayed.
- Press the **■ STOP/BAND** button to select AM or FM.
- Press the **TUNING • SKIP/TIMER +/-** buttons to tune in to a desired station.



NOTE: When using the radio, the station will disappear and the time will be displayed if no button is pressed within 5 seconds.

#### To Quickly Search for a Station

Press and hold the **TUNING • SKIP/TIMER +/-** button until the tuner starts searching for a station, then release. The tuner will stop on the next station.

 
#### To Turn Off the Radio

Press the **CD • RADIO FUNCTION** button to CD or press the **ON/OFF** button to turn the unit off.

#### SETTING A RADIO STATION PRESET

The unit can store a total of 20 stations in memory (10 FM, 10 AM). Presetting allows you to tune in to a station directly.

- Press the **CD • RADIO FUNCTION** button to TUNER.
- Press the **■ STOP/BAND** button to select AM or FM.
- Press the **TUNING • SKIP/TIMER +/-** buttons to tune in to a desired station.
- Press the **MEMORY/CLOCK SET** button until the "MEMORY" indicator blinks and "P 01" appears on the display. The "P 01" is the order of the preset station (1-10).



- Press the **REPEAT/PRESET** button to select the preset number.
- Press the **CLOCK SET/MEMORY** button to store the station.
- Repeat steps 2 to 6 for the next preset.



#### TUNING IN TO A PRESET RADIO STATION

 
- Press the **CD • RADIO FUNCTION** button until TUNER is displayed.
- Press the **■ STOP/BAND** button to select AM or FM.
- Press the **REPEAT/PRESET** button to select a preset station.

### SETTING THE COOKING TIMER

- Press the **TIMER/ON/OFF • SET** button. The "TIMER" indicator and "00" appears on the display.
- Press the **TUNING • SKIP/TIMER +/-** buttons to select your desired time from 1-99 minutes.
- Press the **TIMER/ON/OFF • SET** button repeatedly to select time: 10, 15, 30, 45, 60, 75 and 90 minutes.
- Press and hold the **TUNING • SKIP/TIMER +/-** buttons to fast forward/reverse the cooking time.



- When the preset time elapses, the ALARM will sound and the "TIMER" indicator will blink.



- To turn OFF the ALARM, press the **TIMER/ON/OFF • SET** button once. Otherwise, the ALARM will automatically turn off after 60 minutes if no button is pressed.

Note: Do not press any buttons within 5 seconds after setting the cooking time, otherwise, the cooking timer will be cancelled.

#### CANCELLING THE COOKING TIMER

- Press the **TIMER/ON/OFF • SET** button until the time of the cooking timer shows "00". The "TIMER" indicator will disappear from the display within 5 seconds.

### DISPLAY FUNCTION

#### CD MODE

- During playback, press the **DISP** button repeatedly to shuffle between the CD playback mode and the current time.
- When stopped, press the **DISP** button to shuffle between the total number of CD tracks and the current time.

#### RADIO MODE

- Press the **DISP** button to shuffle between the current radio station and the current time.

### TROUBLESHOOTING, CARE & MAINTENANCE

#### REMOTE CONTROL

- Is the unit plugged into a working power outlet? Try plugging it into one that you know works then test the remote control.
- Is the battery weak? Replace the battery with a new one.
- Make sure that you are pointing the remote control at the remote sensor on the unit.
- Are you too far from the unit when using the remote control? The remote control sensor can only sense a signal from the remote control within 13 feet, so you may need to move closer to the unit.
- Are there any obstacles between the remote control and the unit? If there are, remove all objects in the way.

#### CLEANING THE UNIT

- Do not use volatile chemicals on this unit. Clean by lightly wiping with a dry soft cloth.
- Keep the CD Drawer closed to keep dust out of the unit.

#### CLOCK DOES NOT SHOW CORRECT TIME:

- There was a power outage. Set the clock again as described in "SETTING THE CLOCK".

#### CLEANING THE CD

- If the CD skips or will not play, the disc may need to be cleaned. Before playing, wipe the disc from the center outwards with a clean cloth. After playing, store the disc in its case.

#### HANDLING THE CD

- Only touch the CD on the edge to avoid finger prints on the underside of the CD.
- Do not stick paper or tape on the underside of the CD, and do not write anything on the underside of the disc.

#### CD LENS CARE

- When your CD lens gets dirty it can cause the unit to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner. For instructions on cleaning the CD lens, refer to the instructions accompanying the CD lens cleaner.

### SPECIFICATIONS

**Power consumption:** 45W  
**Power source:** AC 120V 60Hz

**Specifications and external appearance are subject to change without notice.**

### LIMITED WARRANTY

This form describes the protection You will have under this Limited Warranty.

#### LIMITED WARRANTY PERIOD:

This Limited Warranty begins on the date of purchase of the Covered Product and continues for a period of six months.

#### WHAT IS COVERED:

We will pay the cost of labor and repair or replacement parts in the event Your Covered Product fails to operate as a result of a mechanical or electrical failure caused by defects in workmanship and/or materials. A mechanical or electrical failure caused by a direct result of a power surge is also covered. Parts will be replaced with those of like kind and quality, and may be new or remanufactured. If the Covered Product cannot be repaired, if the cost of the repair exceeds the original purchase price or if parts are not available due to the age of the Covered Product or discontinued by the manufacturer, the Covered Product will be replaced with a product of similar features.

#### WHERE YOU ARE COVERED:

Coverage under this Limited Warranty is limited to the United States of America, including the District of Columbia. It does not include any Canadian or U.S. Territories including Guam, Puerto Rico, or U.S. Virgin Islands.

#### WHAT IS NOT COVERED:

- PRODUCTS NOT ORIGINALLY COVERED BY A MANUFACTURER'S WARRANTY;
- ITEMS THAT ARE STILL COVERED BY THE MANUFACTURER'S WARRANTY, REGARDLESS OF WHETHER THE MANUFACTURER HONORS SUCH WARRANTY;
- PERIODIC CHECKUPS AND/OR PREVENTIVE MAINTENANCE AS DIRECTED BY THE MANUFACTURER EXCEPT AS PROVIDED HEREIN;
- INHERENT PRODUCT DEFECTS THAT ARE THE RESPONSIBILITY OF THE MANUFACTURER OR PARTS FAILURE DUE TO A MANUFACTURER'S RECALL;

- ANY AND ALL PRE-EXISTING CONDITIONS THAT OCCUR PRIOR TO THE EFFECTIVE DATE OF THIS LIMITED WARRANTY AND/OR ANY COSTS TO REPAIR ANY PRODUCT SOLD "AS-IS" INCLUDING BUT NOT LIMITED TO FLOOR MODELS, DEMONSTRATION MODELS, ETC;
- PARTS OR REPAIRS DUE TO NORMAL WARE AND TEAR AND ITEMS NORMALLY DESIGNED TO BE PERIODICALLY REPLACED BY THE PURCHASER DURING THE COVERED PRODUCT'S LIFE, INCLUDING BUT NOT LIMITED TO FATTERIES, LIGHT BULBS, ETC.;
- DAMAGE FROM ACCIDENT, ABUSE, MISUSE, MISHANDLING, INTRODUCTION OF FOREIGN OBJECTS INTO THE COVERED PRODUCT, UNAUTHORIZED MODIFICATIONS OF ALTERATIONS TO A COVERED PRODUCT, FAILURE TO FOLLOW THE MANUFACTURER'S INSTRUCTIONS, AND EXTERNAL CAUSES INCLUDING THIRD PARTY ACTIONS, FIRE, THEFT, INSECTS, ANIMALS, EXPOSURE TO WEATHER CONDITIONS, WINDSTORM, SAND, DIRT, HAIL, EARTHQUAKE, FLOOD, WATER, ACTS OF GOD OR CONSEQUENTIAL LOSS OF ANY NATURE;
- LOSS OR DAMAGE CAUSED BY WAR, INVASION OR ACT OF FOREIGN ENEMY, HOSTILITIES, CIVIL WAR, REBELLION, RIOT, STRIKE, LABOR DISTURBANCE, LOCKOUT, OR CIVIL COMMOTION;
- INCIDENTAL, CONSEQUENTIAL OR SECONDARY DAMAGES OR DELAY IN RENDERING SERVICE UNDER THIS LIMITED WARRANTY, OR LOSS OF USE DURING THE PERIOD THAT THE COVERED PRODUCT IS AT AN AUTHORIZED SERVICE CENTER OR OTHERWISE AWAITING PARTS;
- ANY PRODUCT USED IN A COMMERCIAL SETTING OR RENTAL BASIS;
- FAILURES THAT OCCUR OUTSIDE OF THE 50 STATES OF THE UNITED STATES OF AMERICA, INCLUDING THE DISTRICT OF COLUMBIA;
- NONFUNCTIONAL OR AESTHETIC PARTS INCLUDING BUT NOT LIMITED TO PLASTIC PARTS, KNOBS, ROLLERS, BASKETS, SCRATCHES, PEELING AND DENTS;
- UNAUTHORIZED REPAIRS AND/OR PARTS;
- COST OF INSTALLATION, SET-UP, DIAGNOSTIC CHARGES, REMOVAL OR REINSTALLATION OF THE COVERED PRODUCT, EXCEPT AS PROVIDED HEREIN;
- ACCESSORIES USED IN CONJUNCTION WITH A COVERED PRODUCT;
- ANY LOSS OTHER THAN A COVERED BREAKDOWN OF THE COVERED PRODUCT;
- SERVICE WHERE NO PROBLEM CAN BE FOUND;
- BREAKDOWNS WHICH ARE NOT REPORTED WITHIN THE TERM OF THIS LIMITED WARRANTY;
- IMPROPER INSTALLATION OF COMPONENTS OR PERIPHERALS;
- CORRUPTION OF ANY RECORDING MEDIA, INCLUDING ANY PROGRAM, DATA OR SETUP INFORMATION RESIDENT ON ANY HARD DRIVES AND INTERNAL OR EXTERNAL REMOVABLE STORAGE DEVICES, AS A RESULT OF THE MALFUNCTIONING OR DAMAGE OF AN OPERATING PART, OR AS A RESULT OF ANY REPAIRS OR REPLACEMENT UNDER THIS LIMITED WARRANTY;
- DAMAGE TO CLOTHING;
- COLOR FADING OF PICTURE FOR ANY TELEVISION;
- BURNED-IN PHOSPHOR (INCLUDING IMAGE GHOSTING), PIXEL BURNOUT NOT IN ACCORDANCE WITH THE MANUFACTURER'S SPECIFICATIONS.

#### TRANSFERABILITY AND RENEWALS:

This Limited Warranty is not transferable or renewable.

#### SUBROGATION:

If We pay for a loss, We may require You to assign Us Your rights of recovery against others. We will not pay for a loss if You impair these rights to recover. Your rights to recover from others may not be waived.

#### ARBITRATION:

In the event of a disagreement between You and Us concerning costs, either of us may make a written demand for arbitration. This must be done within sixty(60)days after the day You filed Your claim. Each of us will select an arbitrator. The two arbitrators will select an umpire. Each of us will pay the expense of the arbitrator We select. The expenses of the umpire will be shared equally. Unless both of us agree otherwise, arbitration will take place in the county and state in which You live. Local rules apply. A majority decision will be binding.

#### Limit of Liability:

The limit of liability under this Limited Warranty is the least of the cost of (1) the purchase price of the Covered Product excluding tax and delivery costs or (2) authorized repairs not to exceed the purchase price of the Covered Product or (3) replacement of the Covered Product with similar features or (4) reimbursement for authorized repairs or replacement. Upon replacement, there is no longer any obligation for the replaced product under this Limited Warranty.

#### Limitations of Implied Warranty:

All Implied Warranties which may arise under state law, including all Implied Warranties of Merchantability or Fitness for a particular purpose, are limited to the duration of this Warranty and do not cover incidental or consequential damages. Some states do not allow limitations on how long an Implied Warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to You. This Warranty gives You specific legal rights, and You may also have other rights which vary from state to state.

#### Transferability and Renewals:

This Limited Warranty is not transferable or renewable.

#### Subrogation:

If We pay for a loss, We may require You to assign Us Your rights of recovery against others. We will not pay for a loss if You impair these rights to recover. Your rights to recover from others may not be waived.

#### Arbitration:

In the event of a disagreement between You and Us concerning costs, either of us may make a written demand for arbitration. This must be done within sixty(60)days after the day You filed Your claim. Each of us will select an arbitrator. The two arbitrators will select an umpire. Each of us will pay the expense of the arbitrator We select. The expenses of the umpire will be shared equally. Unless both of us agree otherwise, arbitration will take place in the county and state in which You live. Local rules apply. A majority decision will be binding.

Dist. by Wholesale Merchandisers, Inc.  
2929 Walker, N.W., Grand Rapids, MI 49544  
Made in China

#### WHAT TO DO WHEN YOUR PRODUCT FAILS TO OPERATE:

- Call the 24-hour customer service toll-free number at (866) 845-9436.

Many oversights, which are not covered under this Limited Warranty, can be due to simple circumstances such as the Covered Product not being switched on, being unplugged, or a fuse blown at the junction box. For a Covered Product that uses batteries as the primary power supply, or a remote control unit, please check that the batteries do not need replacing or recharging.

#### SERVICE DELIVERABLES:

There is no deductible required to obtain service for Your Covered Product.

#### OTHER PROVISIONS: